



Figure - Best position for duplication

Standard duplication procedure

1. On the new remote, press and hold button **A** and press button **B** four times at the same time; the red LED flashes slowly.
2. Release the two buttons until the red LED flashes now every two seconds.
3. Position the original remote within 2 to 3 cm, as shown in the figure.
4. Press and hold on the original remote the button which you want to copy until the red LED flashes quickly to indicate that the button is ready for copying.
5. Press and hold the button on the new remote to which you want to save the code until the red LED goes off.
6. The code has been successfully copied from the original remote control to the new learn remote control
7. Repeat steps 1 to 6 for all other buttons.

AMC: Automatic Matching Code

BFT duplication procedure

1. On the new remote, press and hold button **A** and press button **B** four times at the same time; the red LED flashes slowly.
2. Release the two buttons until the red LED flashes now every two seconds.
3. Position the original remote within 2 to 3 cm, as shown in the figure.
4. Press and hold on the original remote the button which you want to copy until the red LED turns on with a fixed light and then emits a double flash every two seconds.
5. Press and hold the buttons ② and ③ on the original BFT remote simultaneously to transmit the seed code. Now the LED of the BFT will flash quickly.
6. Press and hold the button on the new remote to which you want to save the code until the red LED goes off.
7. Finally, activate the remote with the AMC procedure.
8. Repeat steps 1 to 7 for all other buttons.

FAAC and GENIUS duplication procedure

*Note: Your original remote must be in **master mode**.*

How to recognise a master/slave transmitter:

- **master:** If you press a any button, the LED flashes before becoming steady.
 - **slave:** If you press any button, the LED goes on immediately with steady light.
1. On the new remote, press and hold button **A** and press button **B** four times at the same time; the red LED flashes slowly.
 2. Release the two buttons until the red LED flashes now every two seconds.
 3. Position the original remote within 2 to 3 cm, as shown in the figure.
 4. Press and hold on the original remote the button which you want to copy until the red LED turns on with a fixed light and then emits a double flash every two seconds.
 5. Press and hold the buttons ② and ③ on the original FAAC/GENIUS remote simultaneously to transmit the seed code. Now the LED of the FAAC and GENIUS will flash quickly.
 6. While this LED is flashing, press and hold the button on the new remote to which you want to save the code until the red LED flashes faster to confirm that the correct code has been copied.
 7. Repeat steps 1 to 6 for all other buttons.

V2 duplication procedure

1. On the new remote, press and hold button **A** and press button **B** four times at the same time; the red LED flashes slowly.
2. Release the two buttons until the red LED flashes now every two seconds.
3. Position the original remote within 2 to 3 cm, as shown in the figure.
4. Press and hold on the original remote the button which you want to copy until the red LED turns on with a fixed light and then emits a double flash every two seconds.
5. Press and hold once the same button of the original V2 remote. Now the LED on the original remote will flash quickly.
6. Press and hold the button on the new remote to which you want to save the code until the red LED goes off.
7. Finally, activate the remote with the AMC procedure.
8. Repeat steps 1 to 7 for all other buttons.

Activating Automatic Matching Code

After all codes have been successfully copied, do not use any remote first . Put the new remote close to the receiver to activate it. Press and hold the button until the LED flashes quickly and then you can try proper functioning.